


OLIVER BONAS

TINTA CHEST OF DRAWERS

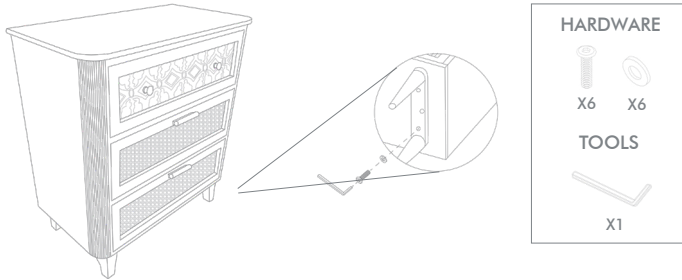

We hope you love your purchase, however if you aren't completely happy, please retain your packaging to ensure its safe return.

TINTA FURNITURE RANGE

Tinta has been lovingly handmade by artisans in Jodhpur, India
Due to this, each piece is unique and variations in colour and finish may occur

MANGO WOOD & MDF

The framework is made from mango wood. This is local grown and harvested in India
The backing and drawer base panels are made from MDF

CANE

Natural materials imported from Malaysia. Variations will occur

FABRIC

100% cotton. Unique screen printed pattern woven in India and fitted to each panel by hand. There may be variations in placement.

FEATURES

Each leg has been fitted with levellers, simply rotate to get the perfect level

CARING FOR YOUR FURNITURE

To keep your furniture happy, make sure you keep it dry
Do not place in front of a radiator or in sunlight and avoid direct heat
Similarly, do not place it outdoors or in any moist environments
Take care when moving your furniture, do not drag as this may weaken the joints and construction

Max weight 10kg per drawer
Ensure weight is evenly distributed
Take care not to overload

Keep away from fire
Be sure to use a coaster for your cup of tea
Not suitable for children's rooms
Domestic use only

CLEANING


Wipe with a damp cloth, followed by a soft dry cloth. Any spills should be wiped dry immediately to avoid discolouration and staining

Avoid abrasive cleaners




Retain this information for reference.

OLIVER BONAS


ANTI-TIP KIT

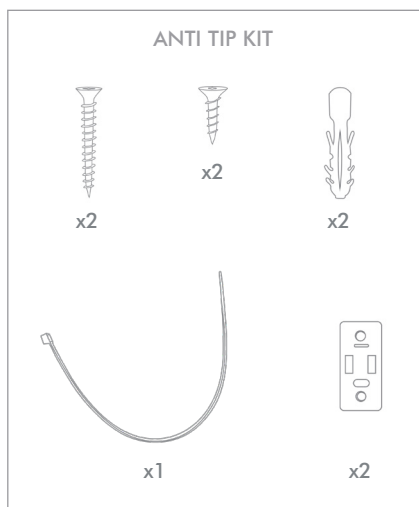


Please use the anti tip kit provided for safety. Please ensure the correct fittings are used for the chosen wall substrate:

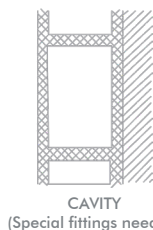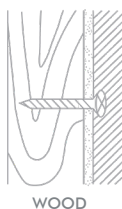


ASSEMBLY

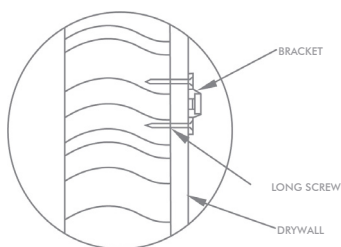

1. Mark the location of the hole on the wall using bracket approx 1" below the top of furniture. Predrill the holes at marked location & insert wall plug. Align bracket onto wall plug & secure using long screws.

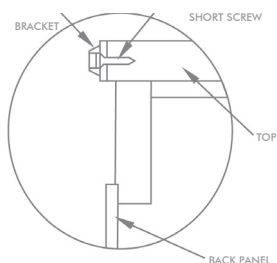

2. Move the furniture to its final position against the wall and mark the location of the wall bracket on the back of the furniture. The bracket that attaches to the furniture must go into the solid wood piece at the top, not into the thinner back panel. Move the furniture away from the wall and place a bracket on the mark. Mark and drill holes for the screws using a 3/32 drill bit. Attach the bracket to the furniture using the short screws.

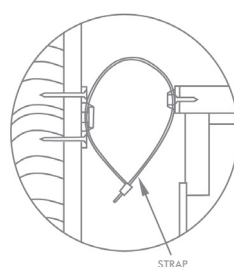

3. Move the furniture to its final position and align the bracket on the furniture with the bracket on the wall. Thread the strap through the bracket as shown, and tighten until snug. Do not over-tighten.

IMPORTANT

Check that the wall bracket is firmly screwed into the stud, the furniture bracket is firmly attached to the frame, and the strap is snug.